

Wall mounting case For surface mounting of LSI:s MTY- and GLY control system

(F

**HB-81** 


Approval:

## Surface mounting, IP54:

Break mains power. Mount the HB-81 Mounting case to the wall; use the small washers that are included. Connect wires according to diagram. Mount the inner case (the controller) into the mounting case using the small, included screws (Connections downwards). Connect mains power. If necessary, make min. adjustment and turn controller off. Mount the cover to the mounting case. Do not over tighten the nut! The white dust protection sealing is used only for flush mounting. With switch in "off" position; press the knob on to the shaft.

#### Drain water hole:

When needed, a 5mm hole can be drilled at the bottom of the mounting case.

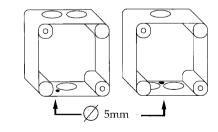









# **HB-81**

Wall mounting case For surface mounting of LSI:s MTY- and GLY control system

CE

Approval:


Surface mounting, IP54:

Break mains power. Mount the HB-81 Mounting case to the wall; use the small washers that are included. Connect wires according to diagram. Mount the inner case (the controller) into the mounting case using the small, included screws (Connections downwards). Connect mains power. If necessary, make min. adjustment and turn controller off. Mount the cover to the mounting case. Do not over tighten the nut! The white dust protection sealing is used only for flush mounting.

With switch in "off" position; press the knob on to the shaft.

## Drain water hole:


When needed, a 5mm hole can be drilled at the bottom of the mounting case.

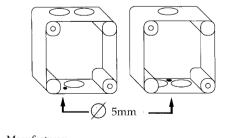



Wall mounting case

 For surface mounting of LSI:s MTY- and GLY control system ( F



Surface mounting, IP54:

Break mains power. Mount the HB-81 Mounting case to the wall: use the small washers that are included.

Connect wires according to diagram. Mount the inner case (the controller) into the mounting case using the small, included screws (Connections downwards).

Connect mains power.

If necessary, make min. adjustment and turn controller off.

Mount the cover to the mounting case. Do not over tighten the nut!

The white dust protection sealing is used

only for flush mounting.

With switch in "off" position; press the knob on to the shaft.

#### Drain water hole:

When needed, a 5mm hole can be drilled at the bottom of the mounting case.







#### Surface mounting, IP54:

Break mains power. Mount the HB-81 Mounting case to the wall: use the small washers that are included.

Connect wires according to diagram. Mount the inner case (the controller) into the mounting case using the small, included screws (Connections downwards).

Connect mains power.

If necessary, make min. adjustment and turn controller off.

Mount the cover to the mounting case. Do not over tighten the nut!

The white dust protection sealing is used only for flush mounting.

With switch in "off" position; press the knob on to the shaft.

## Drain water hole:

When needed, a 5mm hole can be drilled at the bottom of the mounting case.

